




Hair Clipper


Model: SY-HC15

PROFESSIONAL HAIR CLIPPER INSTRUCTION MANUAL


READ ALL INSTRUCTIONS BEFORE USING AND
SAVE THESE INSTRUCTION

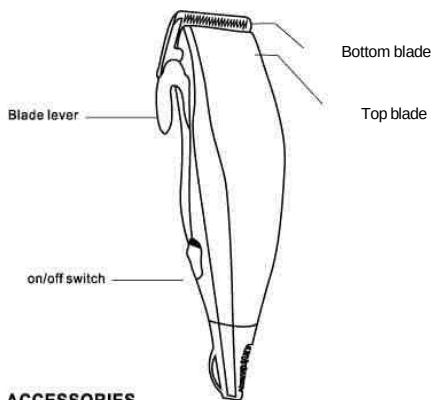

ACCESSORIES

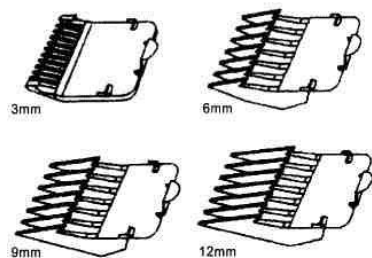

PART NAME

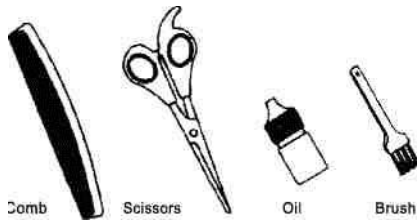

BLADE ALIGNMENT

- Thank you for having purchased our Stylish Hair Clipper SY-HC15. Please read the manual carefully for a proper use and store it in a safe place for future reference.
- Your hair clipper was carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realigned if they have been removed for cleaning or replacement.
- To re-align the blades, simply match the upper teeth and the bottom teeth of the blades so that they fall in place and fix point to point.
(End of top blade teeth should be approximately 1.2mm back from bottom blade. Compare your clipper blades with the sketch.)

If blade alignment is incorrect, add a few drops of oil to the blades, turn on the clipper for a few seconds and then turn it off. Loose the screws slightly and adjust the blade. Tighten the screws after the blade has been aligned.

OIL

To maintain your SY-HC15 in peak condition, the blades should be oiled every few haircuts. Do not use hair oil, grease, oil mixed with kerosene or any solvent. These solvent will evaporate and leave a thick layer of oil which may slow down the blades motion.


BLADE LEVER

- The lever is conveniently located near your thumb (if you are right-handed) it can easily be adjusted while the hair clipper is in your hand.

The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.

When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. Pushing the lever downward gradually increases the cutting length. In its lowest position, the lever will leave the hair approximately the same length as a #1 comb.

The lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy hair cutting has jammed the blades it will help you remove the hair that has been jammed between the two blades without removing the blades.

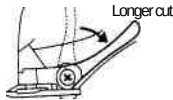

- While the hair clipper is on, quickly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time after you have finished using your hair clipper will help to keep the blades clean and clear. If your hair clipper stops cutting and the above operation does not help, your cutting blades are worn out and therefore you will need to replace them for new blades.

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

To reduce the risk of death or injury by electric shock:

- Unplug this appliance before cleaning.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not use while bathing or in a shower.
- Do not place in, or drop into, water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

To reduce the risk of burns, electrocution, fire, or injury to persons.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- This appliance should never be left unattended when plugged in .
- Close supervision is necessary when this appliance is used by, on, or near children of invalids.
- Never operate this appliance if it has a damaged cord, damaged plug or if it is not working properly.
- Keep the cord away from heated surfaces.

- Do not pull, twist, or wrap the line cord around the appliance.
- Never drop or insert any object into any opening on this appliance.
- Before use, align the blades.
- Do not place the appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades as injury may occur.

INSTRUCTIONS FOR HAIR CUTTING

Before starting to use the SY-HC15:

1. Inspect the hair clipper, making sure that it is free of oil between the cutting blade teeth and turn the unit on to distribute the oil and to make sure it is running smoothly. Wipe off any excess oil. This should be done after each use .While using the unit, untwist the cord from time to time to avoid tangling.
2. Seat the person so their head is approximately at your eye level. This allows better visibility while cutting and a relaxed control of the unit.
3. Before cutting, always comb the hair so it is tangle free and as it is naturally worn.
4. Place a towel around the neck and shoulders of the person while trimming the hair.
5. In the case the SY-HC15 stops working, contact Sytech technical service department for a proper repair or exchange of the product. Do not attempt to open the unit and repair it on your own.

REMINDERS

- Cut the hair in a relaxed and slow manner. Use short strokes only to work gradually over the entire head.
- Always take off a little hair at a time, you can always trim off additional hair later.
- As you work, comb the hair frequently back into the style to which you are cutting.
- When cutting with the hair clipper it is better to keep the hair dry and not wet. With the hair dry, it is much easier to control the amount of hair being cut.

BEGINNING THE HAIRCUT

Cutting hair requires practice so it is always better to leave the hair longer for the first few haircuts until you become used to the length to which each comb attachment cuts the hair .

ATTACHMENT COMB (see main diagram)

- Attachment Comb #1 leaves 3mm (1/8 inch) hair length.
 - Attachment Comb #3 leaves 6mm (1/4 inch) hair length.
 - Attachment Comb #3 leaves 9mm (3/8 inch) hair length.
 - Attachment Comb #4 leaves 12mm (1/2 inch) hair length.
- Each comb attachment is marked accordingly on its outside middle surface.

- To attach a comb, hold it with its teeth upward and slide it in to and along the clipper blade until the front of the comb firmly seats against the clipper blade.
- To remove the comb, simply pull the comb upward and away from the clipper blade.
- For even cutting, allow the comb attachment/cutter to cut its way through the hair. Do not force it through quickly. Also remember to comb the hair frequently to remove trimmed hair and to check for uneven strands.

STEP 1 - NAPE OF THE NECK

Attach the comb attachment of 3mm or 6mm. Hold the clipper cutting edge pointed up and begin the haircut, starting at the centre of the head at the base of the neck(see diagram 1). Hold the clipper comfortably in your hand, lightly against the head with the comb teeth pointing upward. Gradually and slowly lift the clipper, working upwards and outwards, through the hair, trimming just a little at a time. As you cut, gradually lift the hair clipper head towards you. Continue to cut the back area from the bottom of the neck upwards to the top of the ears

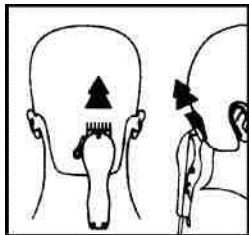


Diagram 1

STEP 2-BACK OF THE HEAD

Change the comb attachment to the next longest comb attachment 9mm or 12mm and cut the back of the head (see diagram 2).

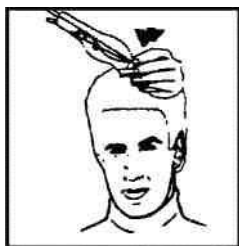
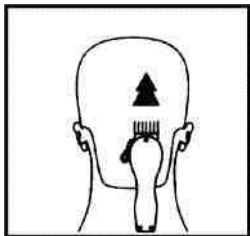


Diagram 5

STEP 3-SIDE OF THE HEAD

Change the comb attachment to the shorter combs 3mm or 6mm. Trim the side burns, i.e. the hair directly in front of the ears. Later change to one of the longer combs, 9mm or 12mm and continue to cut to the top of the head(see diagram 3).

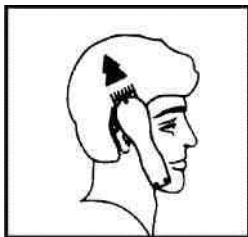


Diagram 3

STEP 4-TOP OF THE HEAD

1. Using comb attachment 9mm or 12mm, cut the top of head from back to front against the direction in which the hair normally grows(see diagram 4).In some cases, this may require the reverse, or cutting from front to back.
2. Comb attachments 3mm or 6mm are used to achieve a close crew cut or short cut.
3. For longer hair on top, use the comb provided and lift the hair on the top of the head. Cut over the comb, with the

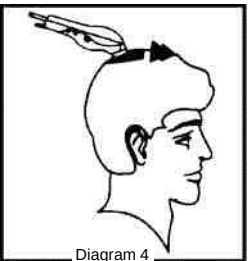


Diagram 4

hair lifted or hold the hair between the fingers to lift it and cut it to your desired length (see diagrams 5 and 6). Always work from the back of the head. Your hair can be cur shorter gradually by reducing the space between the comb/fingers. Comb your hair and check for uneven strands.

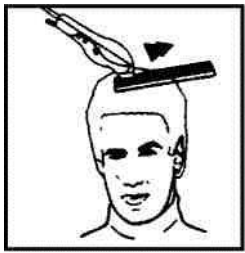


Diagram 6

SHORT TAPERED STYLES-'FLAT TOPS' AND SHORT CUTS

1. Starting with the longest attachment comb(12mm), cut from the back of the neck to the crown .Hold the attachment comb flat against the head and slowly move the clipper through the hair, as shown (see diagram 8).
2. Use the same procedure from the lower side to the upper side of the head, as illustrated. Then cut the hair against the direction in which it grows from the front to the crown and then level the cut with the sides.
3. To give a flat top look, the hair on top of the head must be cut over the top of a flat comb rather than by using the attachment comb.
4. Use closer cutting attachment combs to taper the hair down to the neckline as desired. Comb hair and check for uneven areas and outlining sideboards and neckline as described previously.

STEP 5 -THE FINISHING TOUCH

1. Finally, use the taper lever without an attachment comb for close trimming around the base of the neck, the sides of the neck and the ears.
2. To produce a clean straight line at the sideburns, reverse the hair clipper by turning the reverse side uppermost(see diagram 7).
3. Press the clipper at right angles to the head tips of the blades lightly touching the skin and work downwards. This way you will obtain, as a clean cut as would be given by a razor.

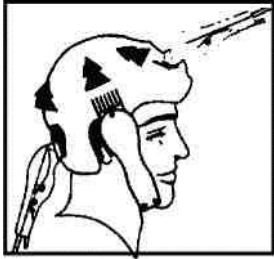


Diagram 8

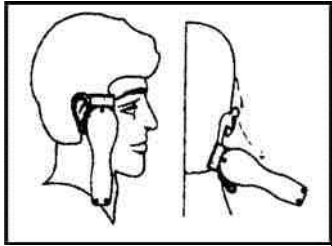


Diagram 2

Diagram 7